



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

Order 9390
Ship Alone
③

D3391-025
Job Sheet 183587



Part No: D3391-025

Job Qty: 1 ea

Part Name: Aft Tube Assembly



Part Weight: 0 lbs

Status: Scheduled

Priority: Medium

Job Created: 9/21/18

Job Tracking No:

Due Date: 11/14/18

Created By: Marie Lajeunesse

Type: SOLD

Description:

Note: DWG REV J SHEETS 9,10,11 IPP Rev B 06-02-07 ECN773 dwg rev. D EC IPP Rev:C 06-03-28 Update
Manuf. Instructions JLM IPP rev D 07.03.20 revF dwg EC IPP rev E 07.11.07 rev G dwg ecn 1053p EC verified
by: DD IPP Rev:F 07-11-13 ECN 1056 DD verified by: EC IPP Rev:G 08-09-10 revH as per dwg DD verified
by:EC IPP Rev:H 11.11.14 AS PER REV.I DD verified by:JLM

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup hrs	Run Hrs	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea		11/14/18	0.00	0.00	Start Up Crosstubes		MD
100	Mori Seiki	1 pcs		11/14/18	2.49	4.17	Mori Seiki TL-40		MD 2018-10-16
110	QC	1 pcs		11/14/18	0.00	0.00	QC2-1		MD 2018-10-16
112	QC	1 pcs		11/14/18	0.00	0.00	QC5		MD 2018-10-16
120	CNC Vertical Machining	1 pcs		11/14/18	0.00	2.63	HAAS1-3		KI 2018-10-16
130	QC	1 pcs		11/14/18	0.00	0.00	QC2 Machining-2		KI 2018-10-16
140	QC	1 pcs		11/14/18	0.00	0.00	QC8 Machining-2		OCT 29 2018
150	Skidtubes	1 pcs		11/14/18	0.00	1.03	Skidtubes-4		MD 2018-10-16
160	CNC Bend Skidtubes	1 pcs		11/14/18	0.00	1.33	CNC Bend Skidtube		MD 2018-10-16
170	QC	1 pcs		11/14/18	0.00	0.00	QC5		MD 2018-10-16
180	Skidtubes	1 pcs		11/14/18	0.00	1.03	Skidtubes-4		MD 2018-10-16
190	QC	1 pcs		11/14/18	0.00	0.00	QC5		MD 2018-10-16
200	HandFinish	1 pcs		11/14/18	0.00	0.58	HandFinish1		D.R 18/11/01
210	QC	1 pcs		11/14/18	0.00	0.00	QC7-2		MD 2018-10-16
220	Skidtubes	1 pcs		11/14/18	0.00	1.41	Skidtubes-4		MD 2018-10-16
230	QC	1 pcs		11/14/18	0.00	0.00	QC5		MD 2018-10-16
235	HandFinish	1 pcs		11/14/18	0.00	0.58	HandFinish2		MD 2018-10-16
240	SprayPaint	1 pcs		11/14/18	0.00	0.25	Spray Paint		MD 2018-10-16
242	Outsource	1 pcs		11/14/18			ATE003-VC		MD 2018-10-16
250	QC	1 pcs		11/14/18	0.00	0.00	QC14		MD 2018-10-16
260	HandFinish	1 pcs		11/14/18	0.00	0.58	HandFinish4		MD 2018-10-16
270	QC	1 pcs		11/14/18	0.00	0.00	QC5		MD 2018-10-16
280	Packaging	1 pcs		11/14/18	0.00	0.00	Packaging3-1		MD 2018-10-16
290	QC21-SA	1 Ea		11/14/18	0.00	0.00	QC21		MD 2018-10-16

Part Op 100 - Turn as per Folio FA599 Rev: J & Dwg D3391 Rev: J ***ensure steady rest is turning true*** REMOVE
Descriptions: STEADY REST AND MACHINIG MARKS***

120 - 1-Machine as per Folio FA 599 Rev: J & Dwg D3391 Rev: J

140 - ***INSPECT INSIDE BORE***

150 - 1-Drill (PILOT HOLE) aft cap holes per Dwg D3391 using DT8803

160 - Form as per Dwg D3391 Using Bend Prog 3391025

180 - 1-Open Aft cap pilot hole to .208" as per Dwg D3391 2-Drill float bag holes using DT8809 as per Dwg D3391(Holes

marked "A" Only. 3-Drill wearplate holes as per Dwg D3391 using DT8878(Mid Tube) & DT8217 Wearplate Jig . *****Do Not Open To Finished Size***** 4-Drill Wearshoe holes as per DWG D3391 using DT8939 locating from 2 previously drilled aft wearplate holes. 5-Open wearplate holes to 0.297" and c'bore as per dwg D3391 6-Open up all float bag holes to 0.328" and c'sink as per Dwg D3391. 8- Scribe batch # on fwd end
 220 - 1- Instal spacers as per dwg D3391 A/R Magnabond 6398 Batch: 5080785 exp. date : 19-05-21 cure time 12hrs as per QSI0015 2- Grind crossbolts flush 3- Back drill using #9 drill 4- Touchup Magnabond 5- Debur
 235 - AND REALODINE AS PER PAR09-043
 240 - PRIME AS PER DWG AND QSI005 4.2.1.3.3 POW11657
 260 - 1-Install inserts as per Dwg D3391 2-Install Aft Cap as per Dwg D3391 A/ R Sikaflex-241/-291 19-3
 Sikaflex expiry date: M139947 3- INSTALL WEARPLATES AS PER DWG
 290 - 5- Detail DD, open (5) forward wearplate holes 0.375", then use DT10247 and drill holes for nutplates and c'sink. 6-Open wearplate holes to 0.297" and c'bore as per dwg D3391. ***SIX FARTHEST AFT HOLES ONLY*** 7-Open up all float bag holes to 0.328" and c'sink as per Dwg D3391. 8-Debur 9- Scribe batch # on fwd end

B139927

Job BOM					<u>006466</u>
Part / Item	Component Name	Quantity	Operation	Container	
D6014-090	Aluminum Extrusion	1 Ea (1 ea)	90-Start up Operation		
D3670-4-200	Bushing	4 Ea (4 ea)	220-Skidtubes		<u>5081002</u>
ALS4-1032-130	Rivnut	8 Ea (8 ea)	260-HandFinish		<u>5083279</u>
ALS4-1032-225	Rivnut	4 Ea (4 ea)	260-HandFinish		<u>5058139</u>
AN3C4A	Bolt	6 Ea (6 ea)	260-HandFinish		<u>5095223</u>
AN3C5A	Bolt	4 Ea (4 ea)	260-HandFinish		<u>5095211</u>
D2646	Aft Cap	1 Ea (1 ea)	260-HandFinish		<u>F163251</u>
D3672-1	Washer, Phenolic	2 Ea (2 ea)	260-HandFinish		<u>F164068</u>
D4095-047	Wearpad Aft	1 Ea (1 ea)	260-HandFinish		<u>5072811</u>
D4095-049	Wearpad Aft	1 Ea (1 ea)	260-HandFinish		<u>5063238</u>
MS20601-AD4W3	Rivet	12 Ea (12 ea)	260-HandFinish		<u>5092687</u>
MS20601-AD4W7	Rivet	8 Ea (8 ea)	260-HandFinish		<u>M137148</u>
MS21075L5	Nut Plate	10 Ea (10 ea)	260-HandFinish		<u>5093726</u>
NAS1149C0332R	Washer	10 Ea (10 ea)	260-HandFinish		<u>5089465</u>

Job Allocations				
Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D6014-090	1	17	0
220-Skidtubes	D3670-4-200	4	43	0
260-HandFinish	ALS4-1032-130	8	12,174	0
	ALS4-1032-225	4	1,947	0
	AN3C4A	6	2,249	0
	AN3C5A	4	1,934	0
	D2646	1	68	0
	D3672-1	2	988	0
	D4095-047	1	23	0
	D4095-049	1	32	0
	MS20601-AD4W3	12	889	0
	MS20601-AD4W7	8	129	0
	MS21075L5	10	374	0
	NAS1149C0332R	10	5,211	0

Part Specifications

Specifications could not be found.

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐		FAULT CATEGORY Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐					
OTHER : _____									

③

DART AEROSPACE LTD		Work Order:	183587
Description: Float Skidtube (412)		Part Number:	D3391-3
Inspection Dwg: D3391	Rev: J	Page 1 of 1	

FIRST ARTICLE INSPECTION CHECKLIST

Drawing Dimension	Tolerance	Actual Dimension	Accept	Reject	Method of Inspection	Comments
Lathe Section						
14.000	+/-0.010	14.000	✓		Tape	
3.500	+/-0.010	3.492	✓		CNC-08	
Ø3.200	+/-0.010	3.207	✓		CNC-05	
Ø3.750	+/-0.010	3.749	✓		CNC-05	
30° x 0.060 chamfer	+/-0.010	.063	✓		CNC-08	
88.93	+/-0.030	88.93	✓		Tape	



Measured by:		Date:	
Audited by:		Date:	

HAAS Section						
1.526	+0.000/-0.030	1.517	✓		Kt-05	vern.
7.500	+/-0.010	7.500	✓		" "	" "
27.750	+/-0.010	27.750	✓		Tape	—
31.750	+/-0.010	31.750	✓		" "	" "
35.250	+/-0.010	35.250	✓		" "	" "
3.300	+/-0.010	3.300	✓		Kt-05	vern.
0.200	+/-0.010	0.200	✓		" "	" "
3.520	+/-0.010	3.517	✓		SL-05	micrometer
0.687	+0.010/-0.000	0.688	✓		Kt-05	vern.
R0.062	+/-0.010	0.0625	✓		R-G	—
Ø0.484	+0.005/-0.001	0.484	✓		Kt-05	vern.

Measured by: Kt 1	Date: 2018-10-16
Audited by: 9-89	Date:

Rev	Date	Change	Revised by	Approved
A	06.04.24	New Issue P/O D3391-015/-025	KJ/JLM	
B	06.06.19	Dwg revision update	KJ/JLM	
C	07.04.20	Ø0.208 dimension removed	KJ/JLM	
D	07.09.06	0.400 dimension removed	KJ/JLM	
E	07.11.23	Dwg Rev. updated	KJ/EC/DD	
F	09.04.27	Dimensions updated per Rev H and NCR09-028	KJ/JLM	
G	09.11.16	Dimension 0.200 removed	KJ	
H	11.06.21	Dimension 44.995 removed	KJ	
I	12.05.15	Dwg Rev updated	KJ	
J	12.05.23	Dimension updated	KJ	
K	12.10.15	88.93 dimension removed	KJ	
L	12.11.28	88.93 dimension added	KJ	
M	16.06.23	Dimensions updated per Rev J	KJ	

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 183587 HLT
18-09-21

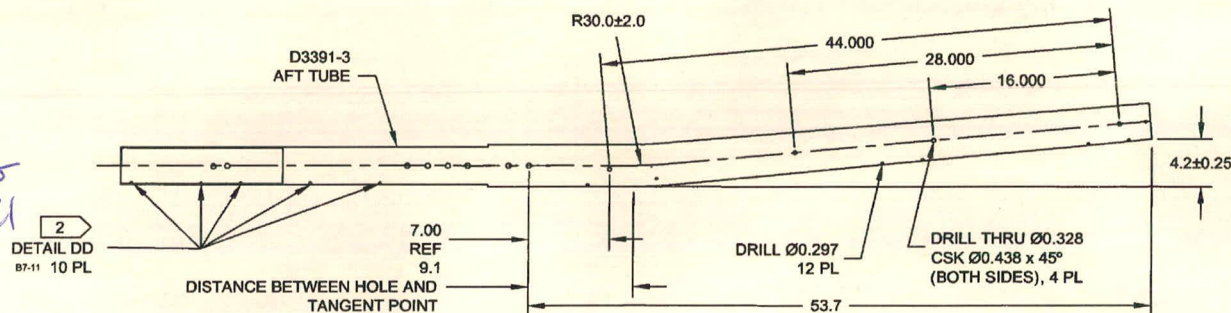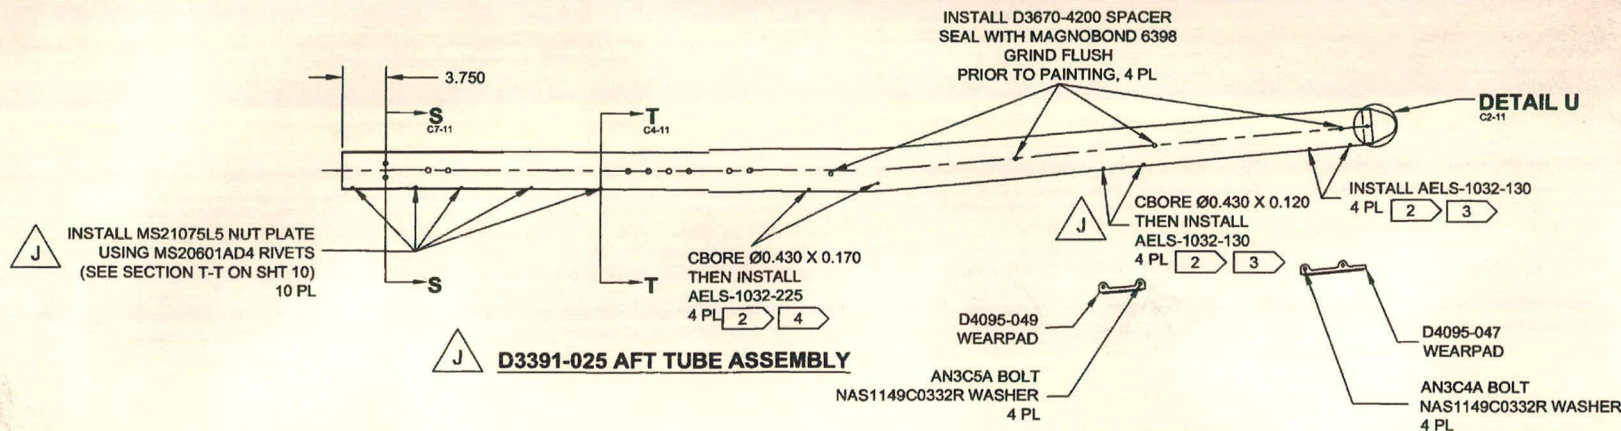

J BENDING AND DRILLING DETAIL

D3391-025 AFT TUBE ASSEMBLY PARTS LIST


QTY	PART NUMBER	DESCRIPTION
X	D3391-025	AFT TUBE ASSEMBLY
1	D2846	AFT CAP
1	D3391-3	AFT TUBE
4	D3670-4200	SPACER
2	D3672-1	WASHER
1	D4095-049	WEARPAD
1	D4095-047	WEARPAD
8	AELS-1032-130	INSERT
4	AELS-1032-225	INSERT
6	AN3C4A	BOLT
4	AN3C5A	BOLT
20	MS20601AD4	RIVET, BLIND
10	MS21075L5	NUT PLATE FLOATING
10	NAS1149C0332R	WASHER

NOTES:

- 1) COAT ALL EXPOSED FASTENERS WITH LPS "LPS PROCYON"
- 2) USE DART DRILL TEMPLATE DT8217 TO LOCATE AND DRILL Ø0.297 AND Ø0.375 HOLES FOR WEARSHOE INSERTS AND NUTPLATES. CBORE AS NOTED AND INSTALL INSERT/NUTPLATES EXCEPT WHERE INDICATED. USE NUT PLATE DRILL JIG IF REQUIRED.
- 3) ENSURE WALL THICKNESS IS BETWEEN 0.070 AND 0.130 BEFORE INSTALLING INSERT
- 4) ENSURE WALL THICKNESS IS BETWEEN 0.130 AND 0.225 BEFORE INSTALLING INSERT

RELEASED
2016-04-28


DESIGN	PH	DART AEROSPACE USA, INC	
DRAWN	ML	EUGENE, OR	
CHECKED	CP	DRAWING NO.	REV. J
MFG. APPR.		D3391	SHEET 9 OF 11
APPROVED		TITLE	SCALE
DE APPR.		AFT TUBE ASSEMBLY	NTS
DATE	16.01.14	COPYRIGHT © 2006 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

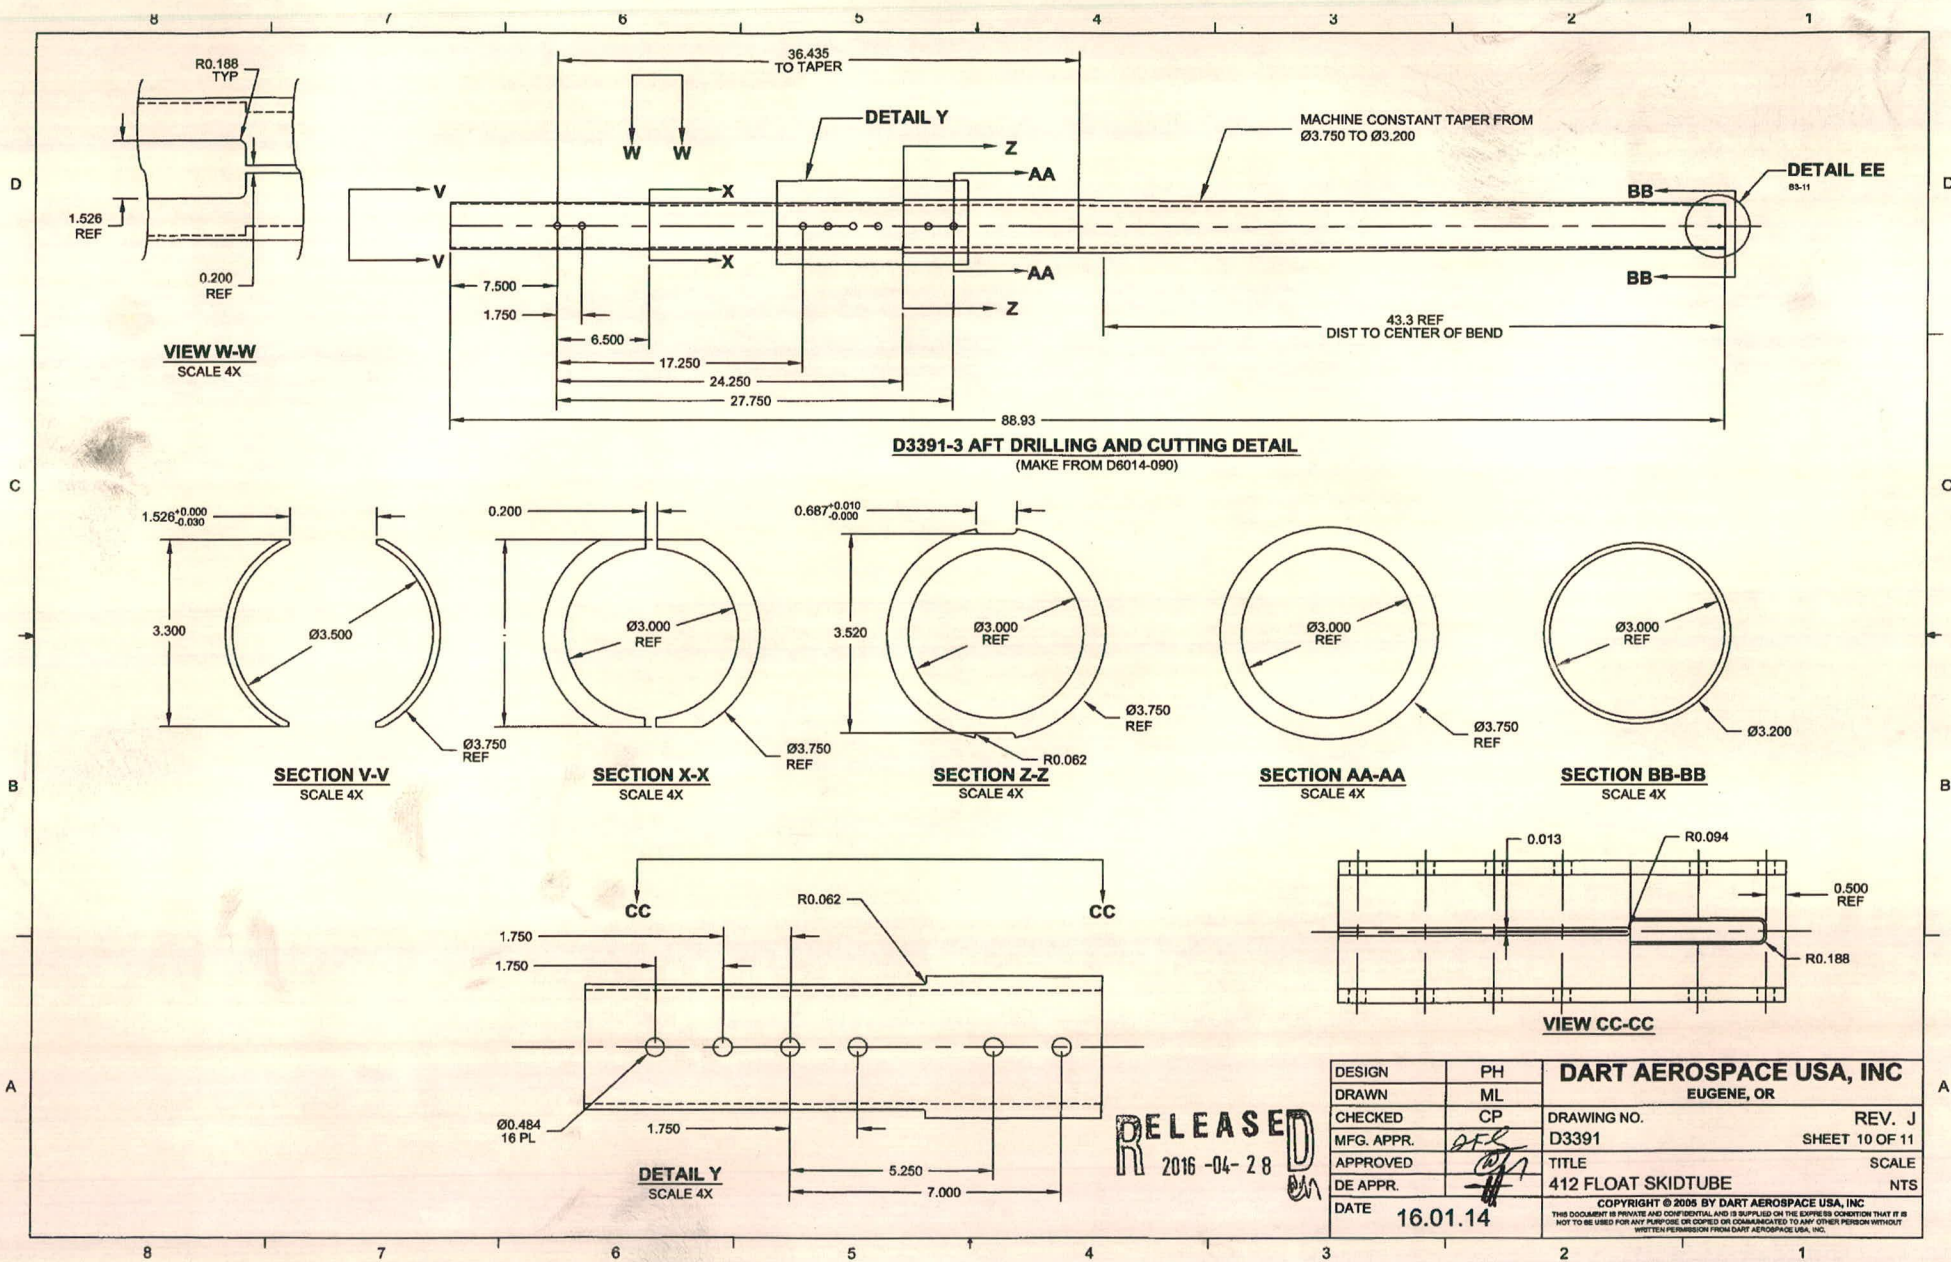


D3391-3 AFT DRILLING AND CUTTING DETAIL
(MAKE FROM D6014-090)

RELEASED
2016-04-28


DESIGN	PH	DART AEROSPACE USA, INC	
DRAWN	ML	EUGENE, OR	
CHECKED	CP	DRAWING NO.	REV. J
MFG. APPR.	<i>[Signature]</i>	D3391	SHEET 10 OF 11
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	412 FLOAT SKIDTUBE	NTS
DATE	16.01.14	COPYRIGHT © 2005 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

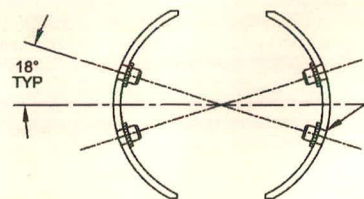


SECTION S-S D6-8,9
SCALE 5X

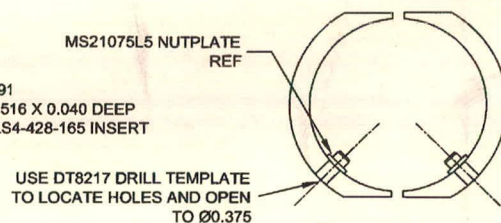


SECTION T-T D6-8,9
SCALE 5X
5 PL

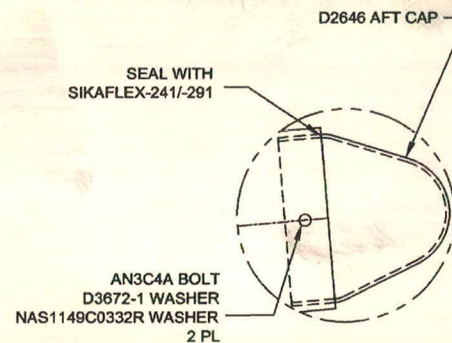

DETAIL U D1-8,9
SCALE 5X

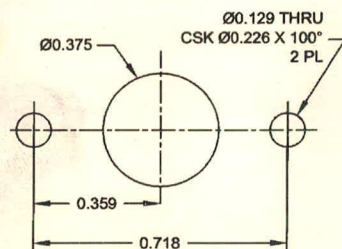

DRILLING DETAIL DD B7-8,9
SCALE 10X

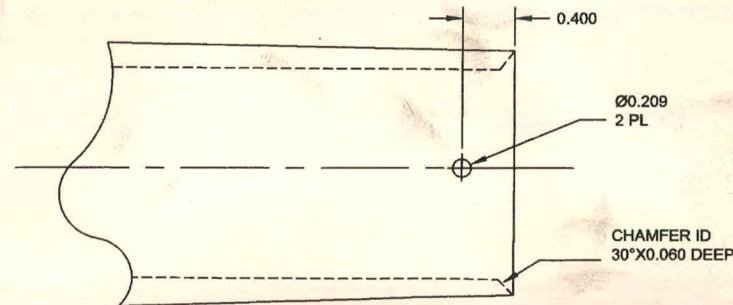

DETAIL EE D1-11
SCALE 2X

NOTES:
1) USE INDUSTRY STANDARD NUT PLATE DRILL JIG IF REQUIRED.

RELEASED
2016-04-28

DESIGN	PH	DART AEROSPACE USA, INC	
DRAWN	ML	EUGENE, OR	
CHECKED	CP	DRAWING NO.	REV.
MFG. APPR.		D3391	SHEET 11 OF 11
APPROVED		TITLE	SCALE
DE APPR.		AFT TUBE ASSEMBLY	NT
DATE	16.01.14	COPYRIGHT © 2006 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

